

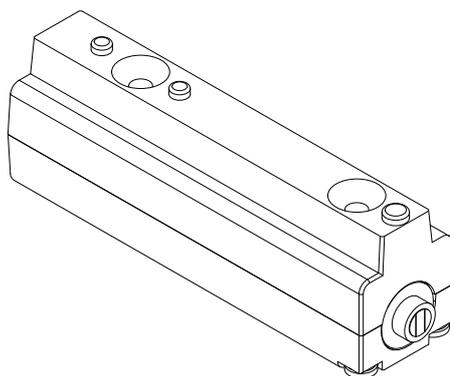
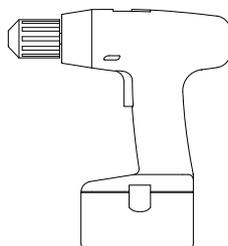



ECLISSE Touch Latch AUTPP11

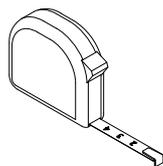

TOOLS REQUIRED

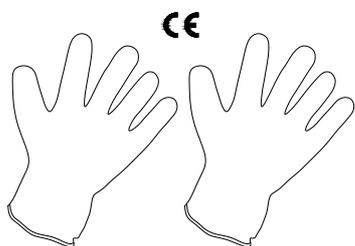

CH. 6 - 2,5 - 2




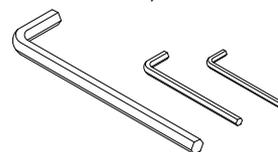


If you follow carefully these instructions for the assembly and installation process your life will be easier!

A pair of tressles are very useful when assembling the frames. Some parts may have sharp edges so use gloves and be careful when handling the parts.


All Eclisse products are fully inspected and tested before they leave the factory.

COMPONENTS

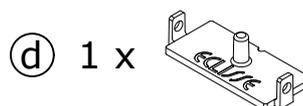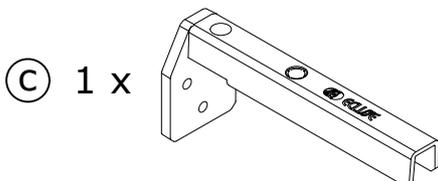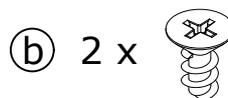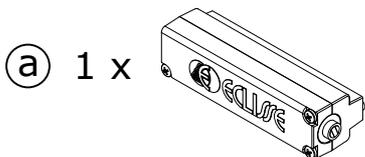


1


A: Remove the door from the system.
If your door is not currently in place – please skip to step 2.

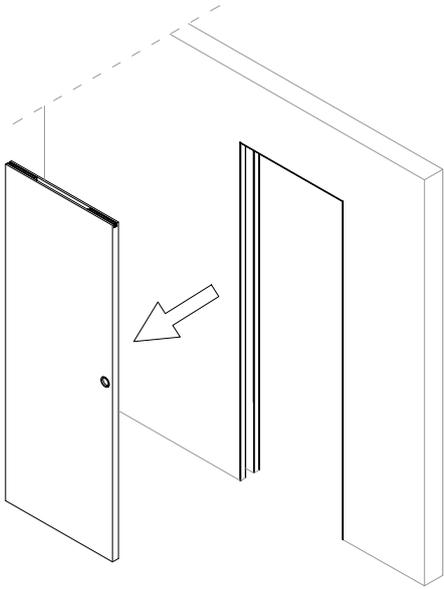


D: Slide the leading hanging bracket out from the leading edge of the door, slightly lifting the door as you go will help this process.

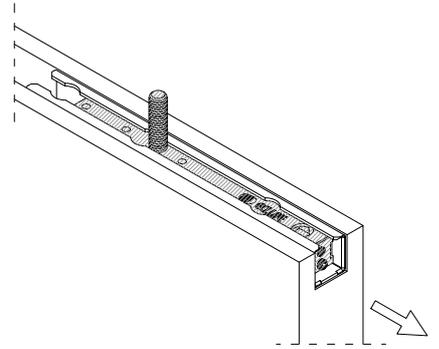


B: Remove the grey cap off the leading edge of the door at the top to reveal the brackets.

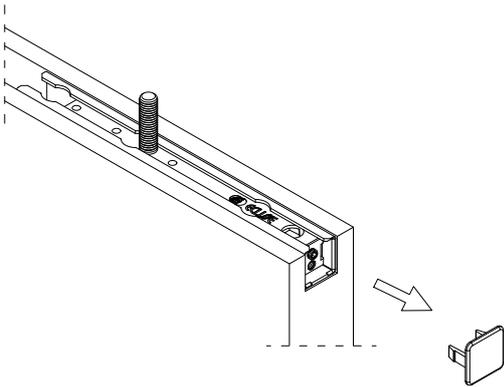


E: Simultaneously slide and pivot the leading edge of the door out of the system to reveal the rear hanging bracket.

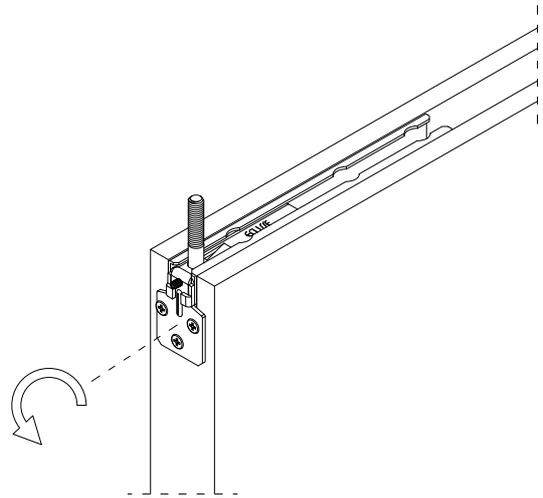

C: Insert black grub screws into the lower hole in the leading hanging bracket (this lifts the locking lever).

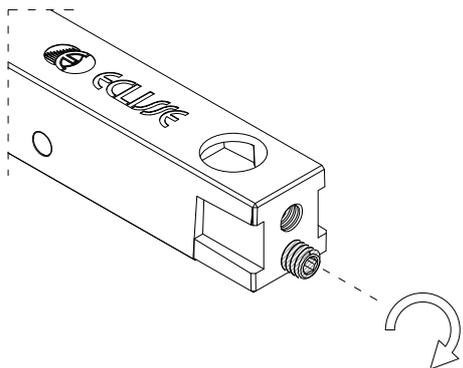


F: Remove the 3 screws holding the rear hanging bracket into place and slide this free of the door.
This will allow you to remove the door entirely.

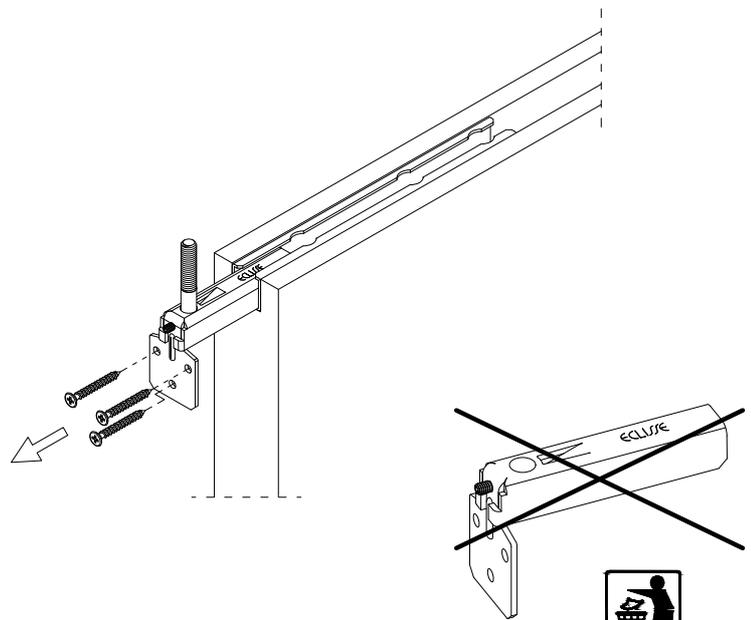


2

Remove the track from the pocket unit by removing the small screws holding the track to the header across the opening. Slide the track to one side and it will drop out.
NOTE: Store these screws safely.

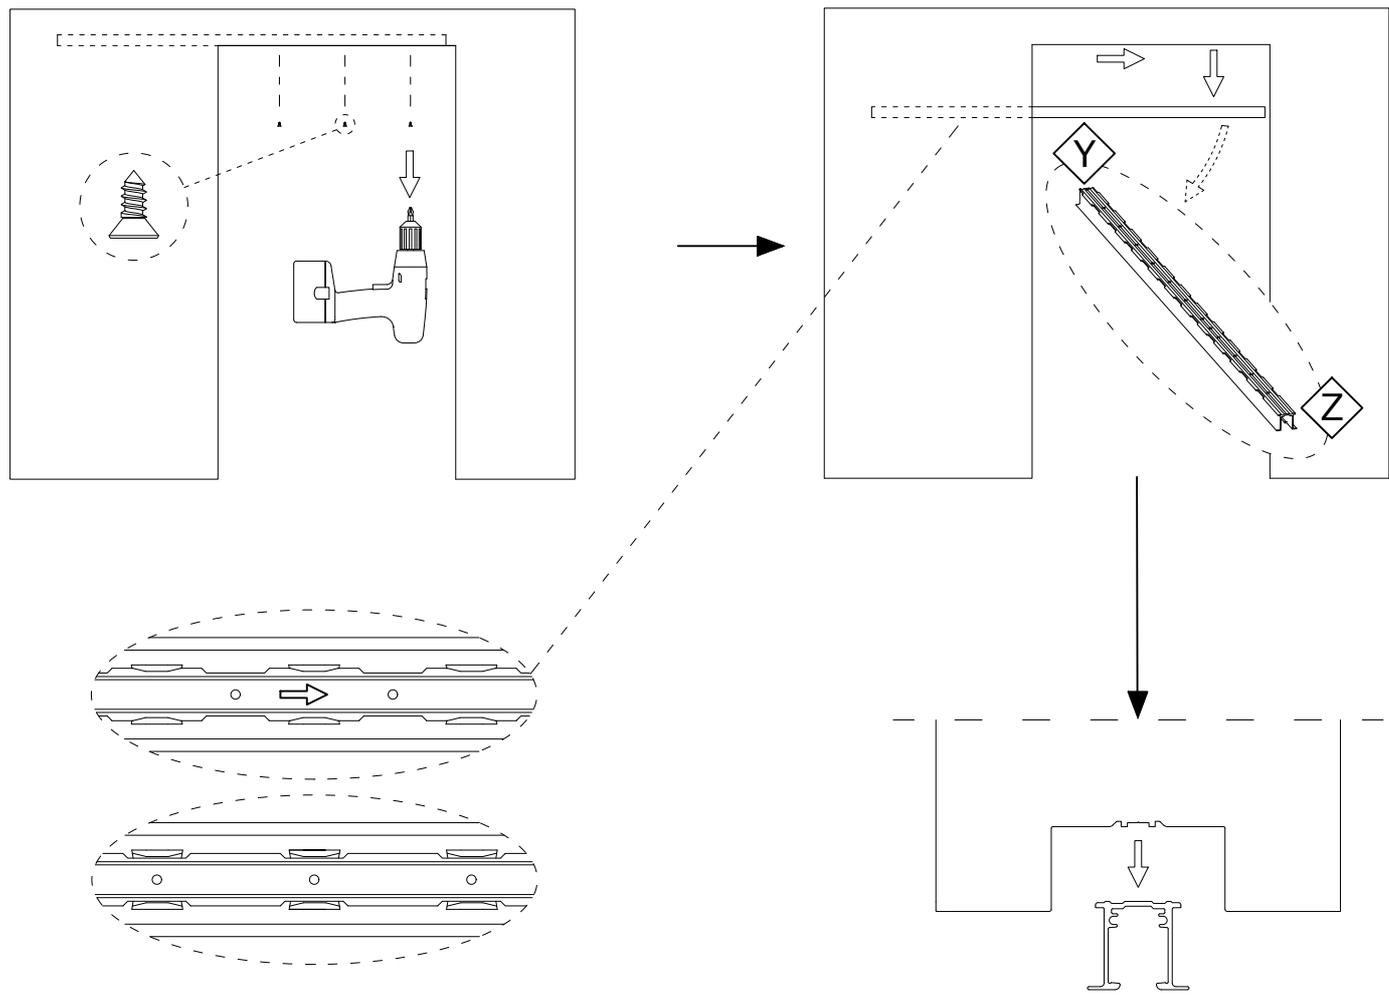


3


Remove the leading adjustable stop from the track and remove the runners.

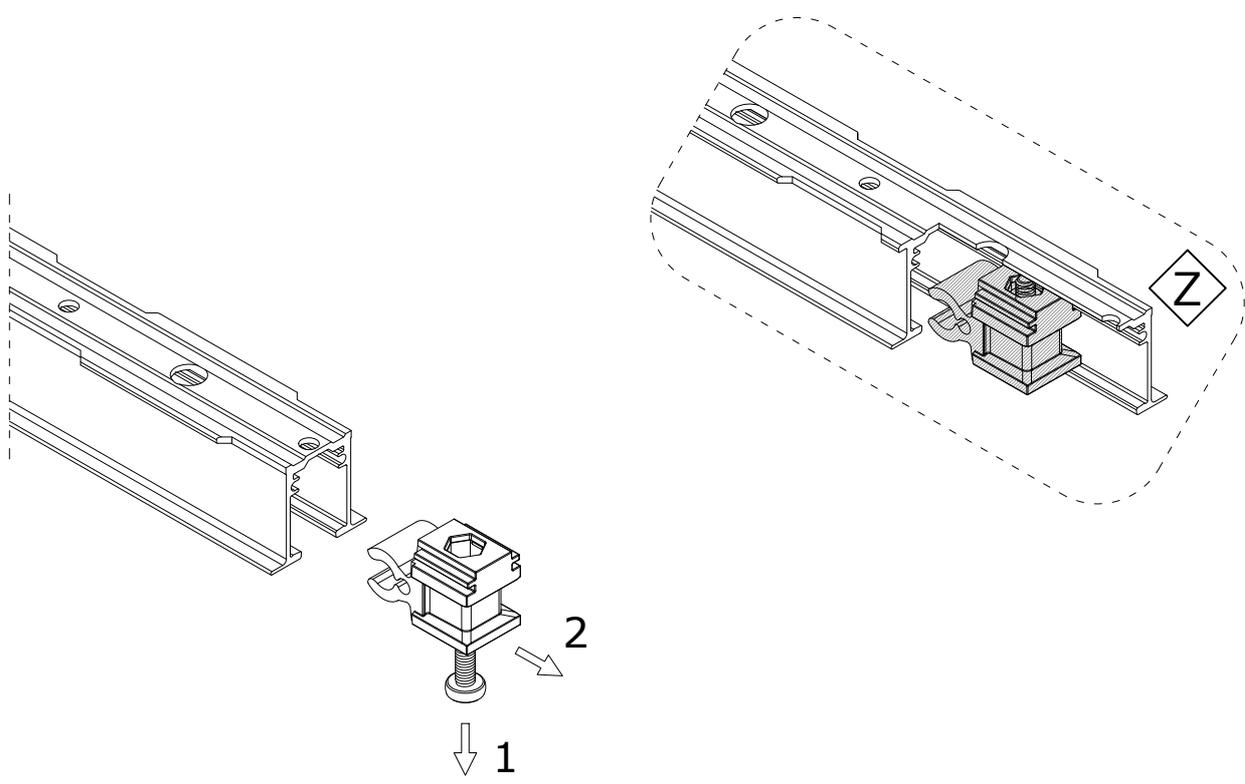


4 Remove the rear adjustable stop from the stop-bar and dispose of the adjustable stop.

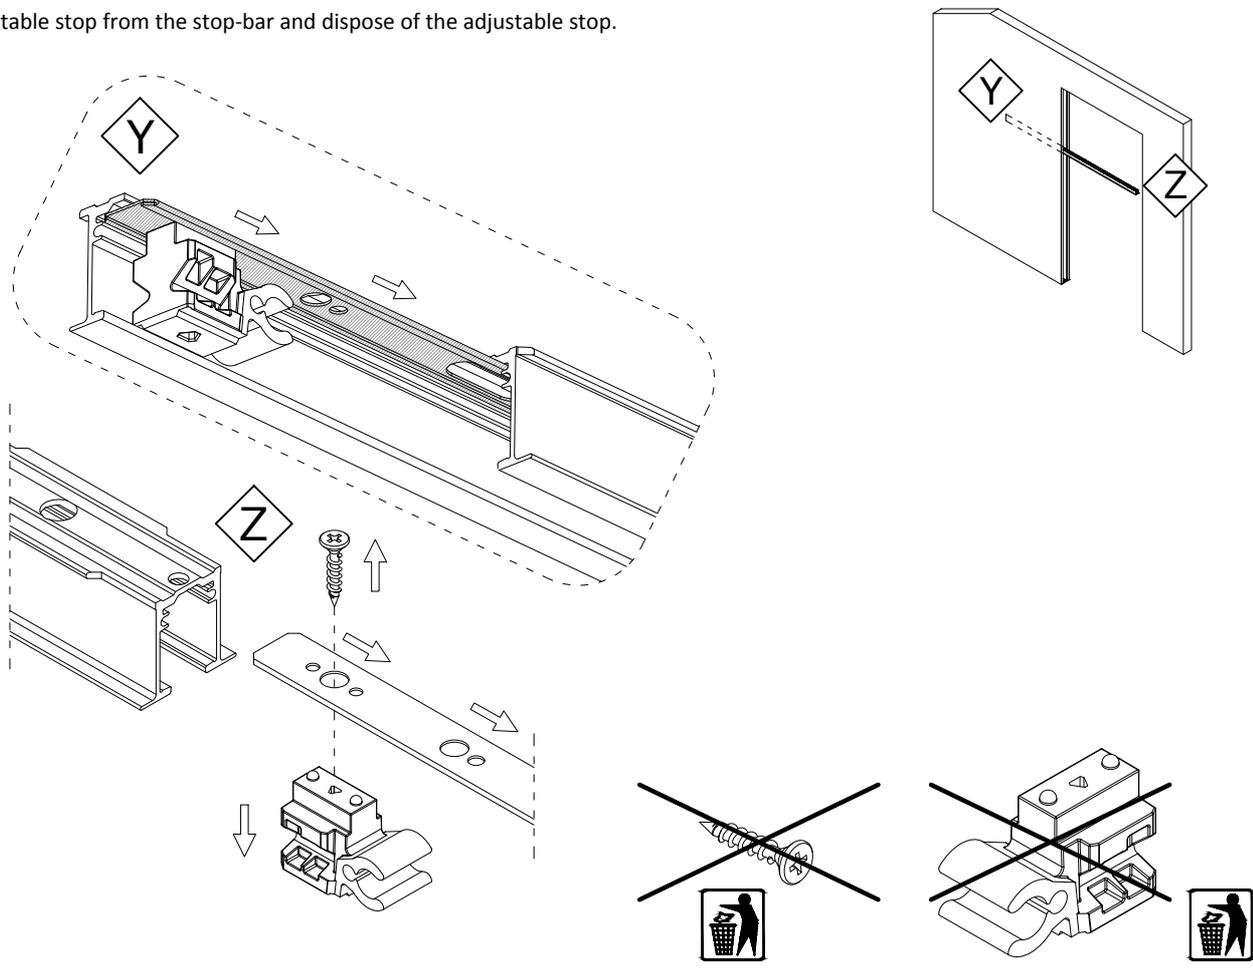


5 Screw the Touch Latch to the stop bar with the screws provided, as shown below.

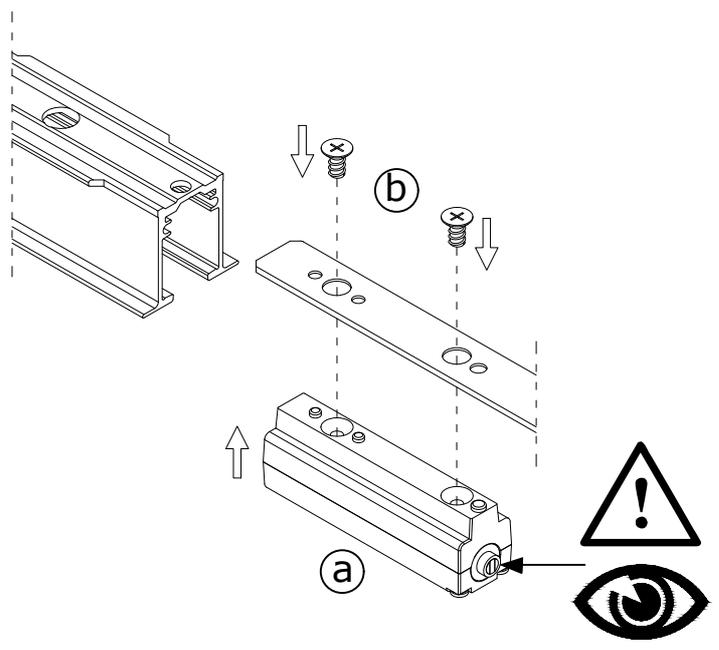


6 Slide the Touch Latch and stop-bar back into the track in the same orientation it was removed.
NOTE: Ensure it is inserted into the upper slot as shown.

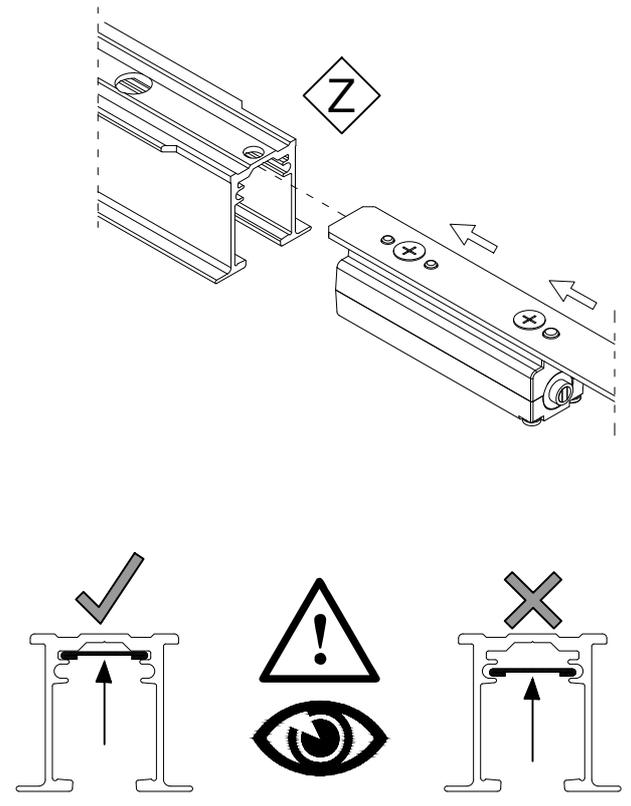


7 Insert rollers back into the track.
 NOTE: Ensure the nibs on the roller are facing downwards.

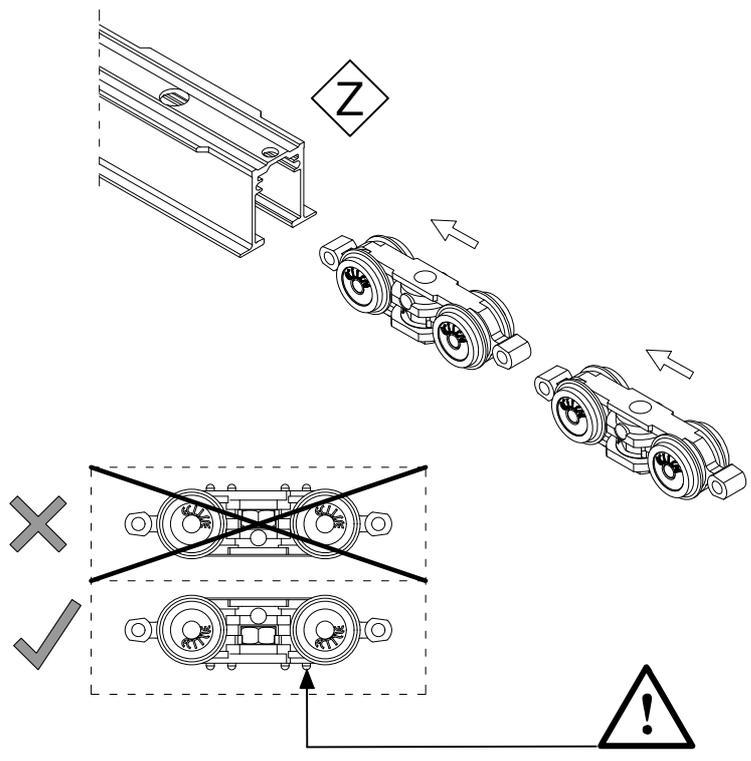


8 Insert the leading adjustable stop in to the track and fix into place by tightening the bolt inside.

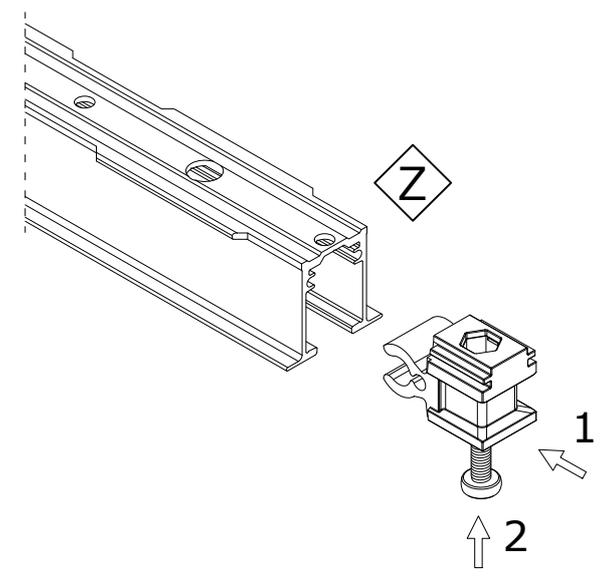

9 Insert the track back into the pocket door system in the reverse order of removal.

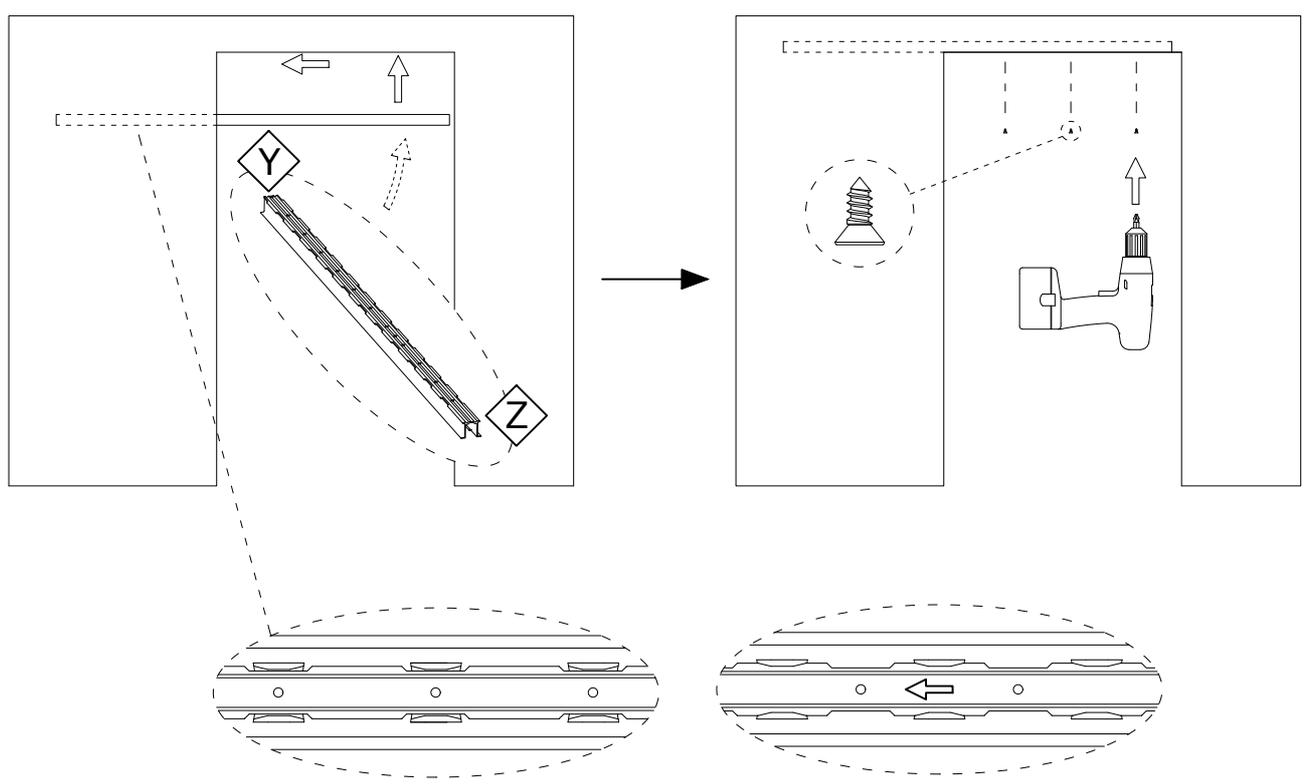



10 Remove the rear hanging bolt from the original rear hanging bracket and insert it into the replacement rear hanging bracket provided in the Touch Latch box.

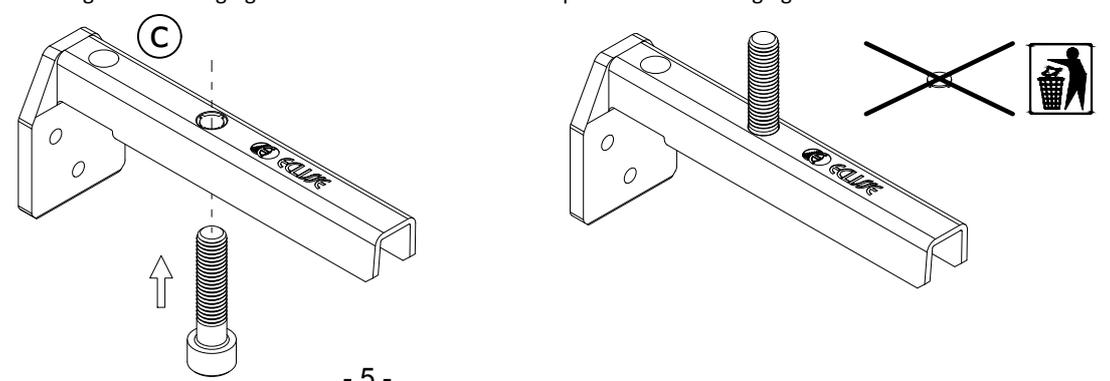


11

NOTE: If you intend to recess your door flush into the pocket when open, you will need to continue the rebate in the base of the door right through to the front edge.


A: Hang the door back into the system in the reverse order of removal.

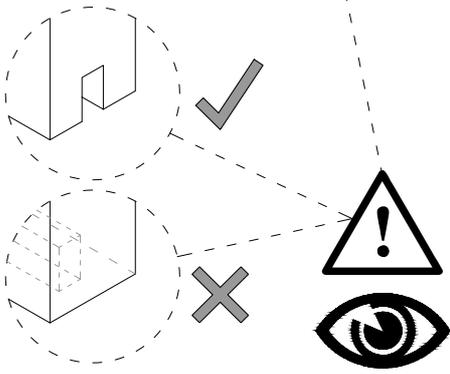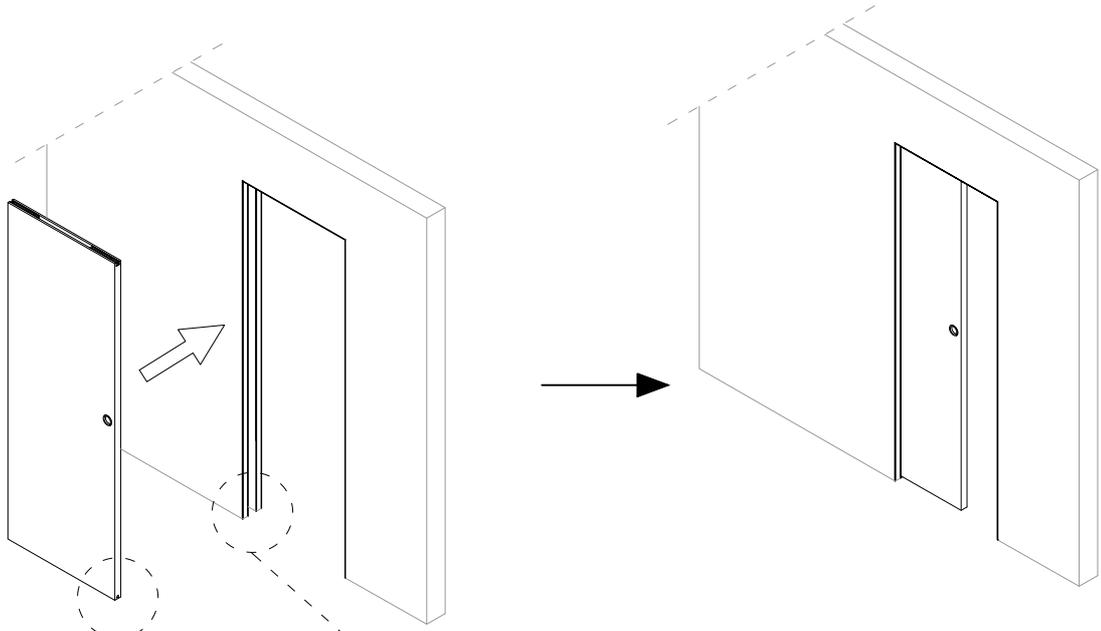


B: Insert the floor guide into place in the orientation shown below.

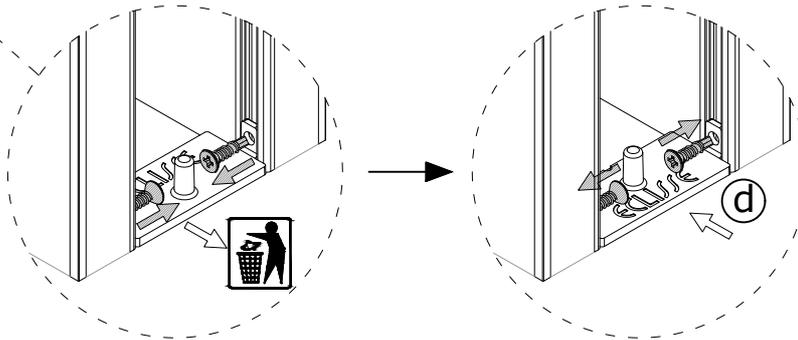


C: Slide the new rear hanging bracket into the back of the door and secure in place with 3 screws. Slot the door back into the pocket half way and insert the leading hanging bracket. Once in place, remove the black grub screw from the lower hole and screw it back in the upper hole to lock the bracket into the door.

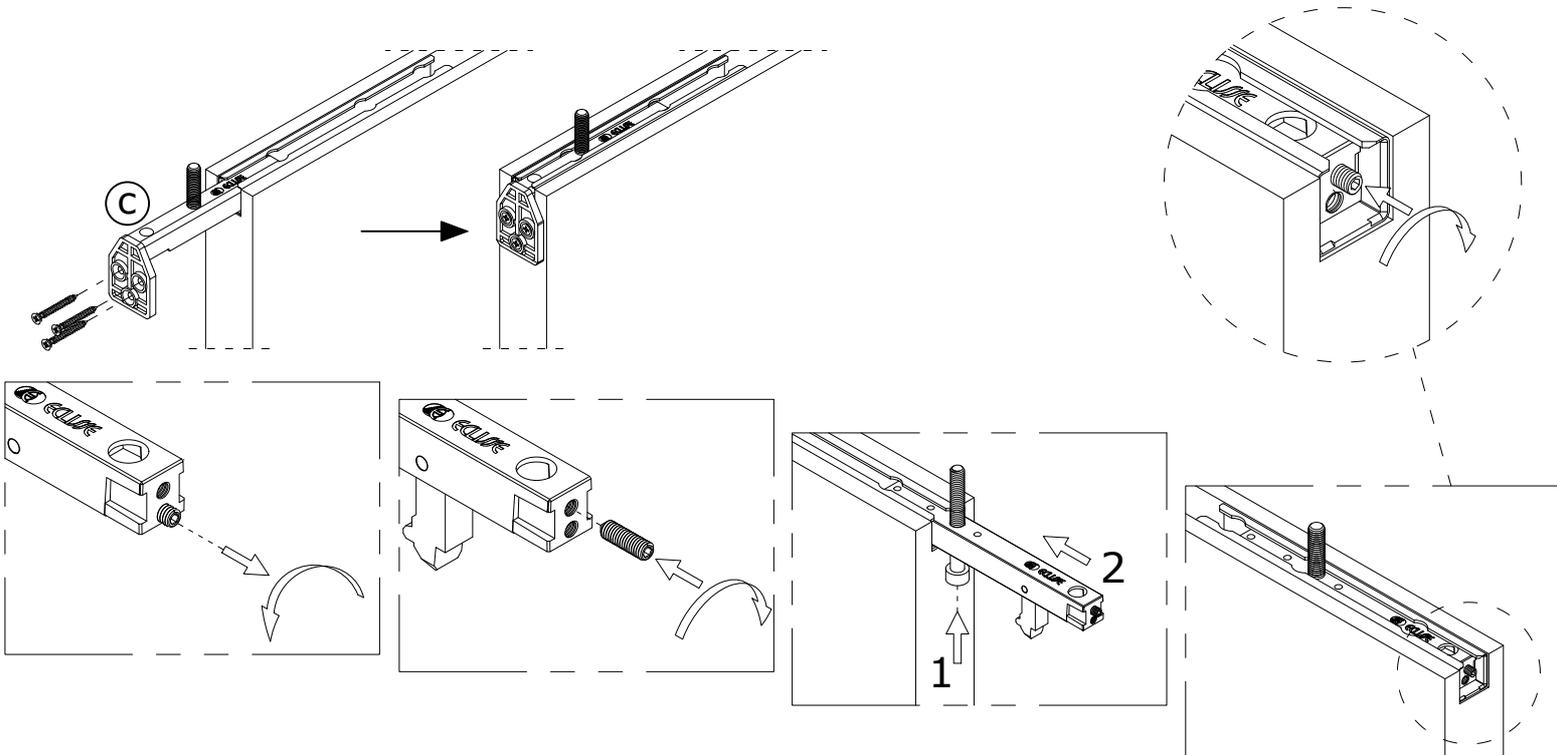



12 A: Pull the rear stop-bar forward so it connects with the rear roller and then push the door back to where you want it to stop when fully open.

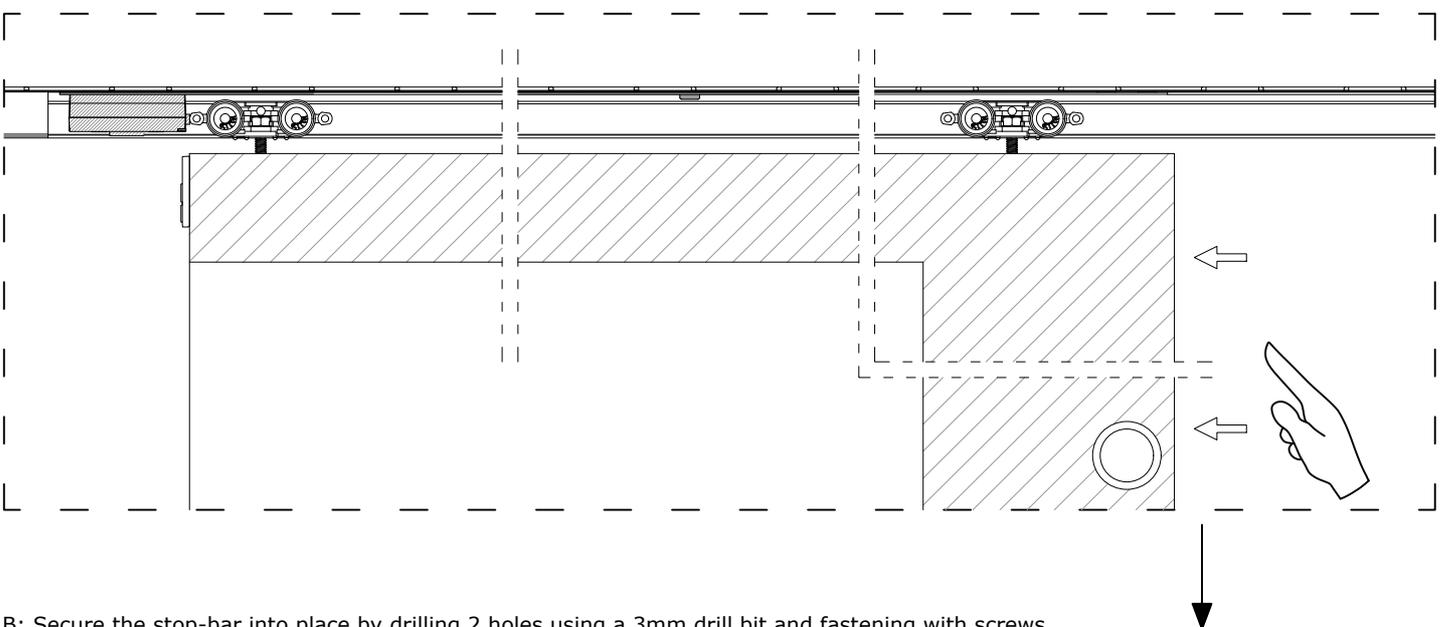

B: Secure the stop-bar into place by drilling 2 holes using a 3mm drill bit and fastening with screws.

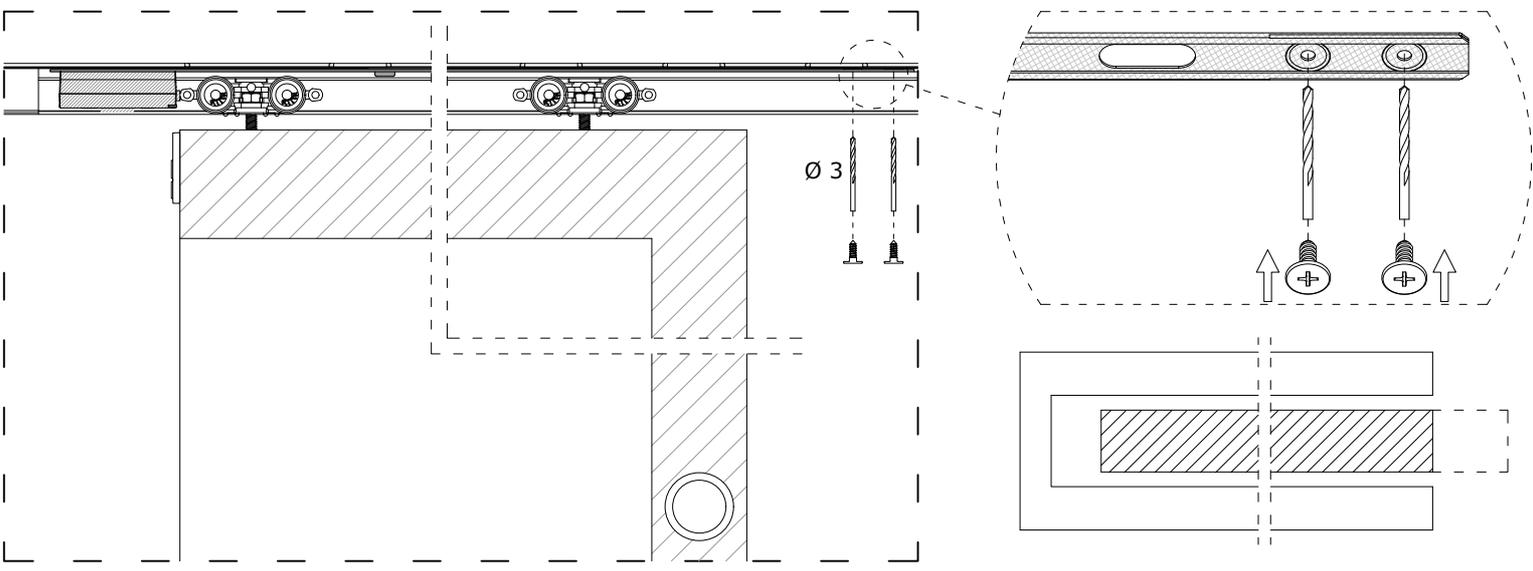

C: Ensure the fastening screws are straight and not protruding to ensure they do not catch the rollers.

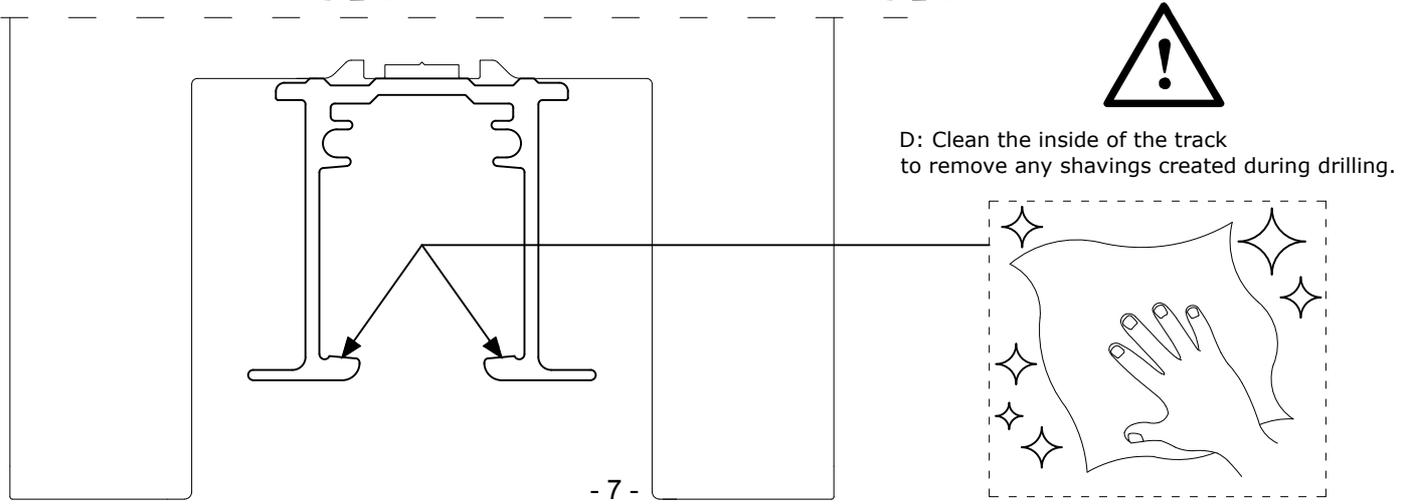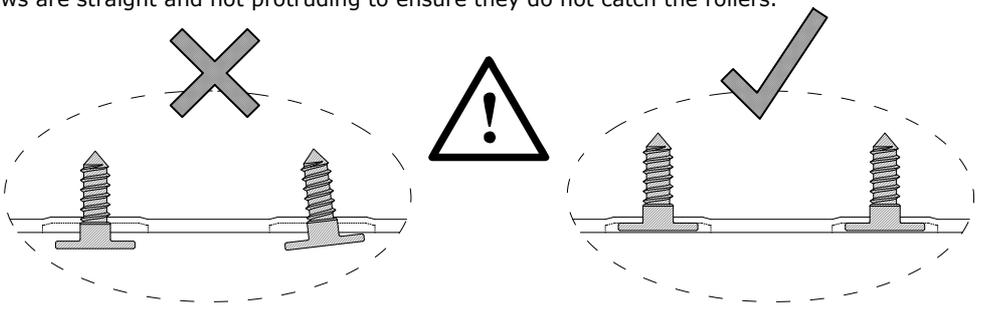



www.eclisseworld.com/en/dealer-locator

